



Description of the LEDs on the ES1130

- MCD: Master CPU Display
Off: Normal operation
On: Reset on PowerPC
Blinking: -receiving L1 Message while active L1 loader
- MCI: Master CPU Interrupt
On: Interrupt on PowerPC
- MSF: VME-Bus: Module/SysFail
Off: Normal operation
On: Failure: SysFail on VME-Bus generated
- SCD: Slave CPU Display
Off: Normal operation
On: Error status firmware
(Loss of communication between PC and ES1130 due to a crash of the MPC860T communication processor)
Blinking: Activity on the Ethernet Link

Blinking Period of the SCD	On	Off	On	Off
No Link	100ms	100ms	100ms	100ms
10 Mbit-Link Half Duplex	100ms	500ms	100ms	500ms
100 Mbit-Link Half Duplex	500ms	500ms	500ms	500ms
100 Mbit-Link Full Duplex	500ms	100ms	500ms	100ms

APPLIES TO PRODUCTS

ES1130

